


MINE BEVELER EMB-0307A ASSEMBLY

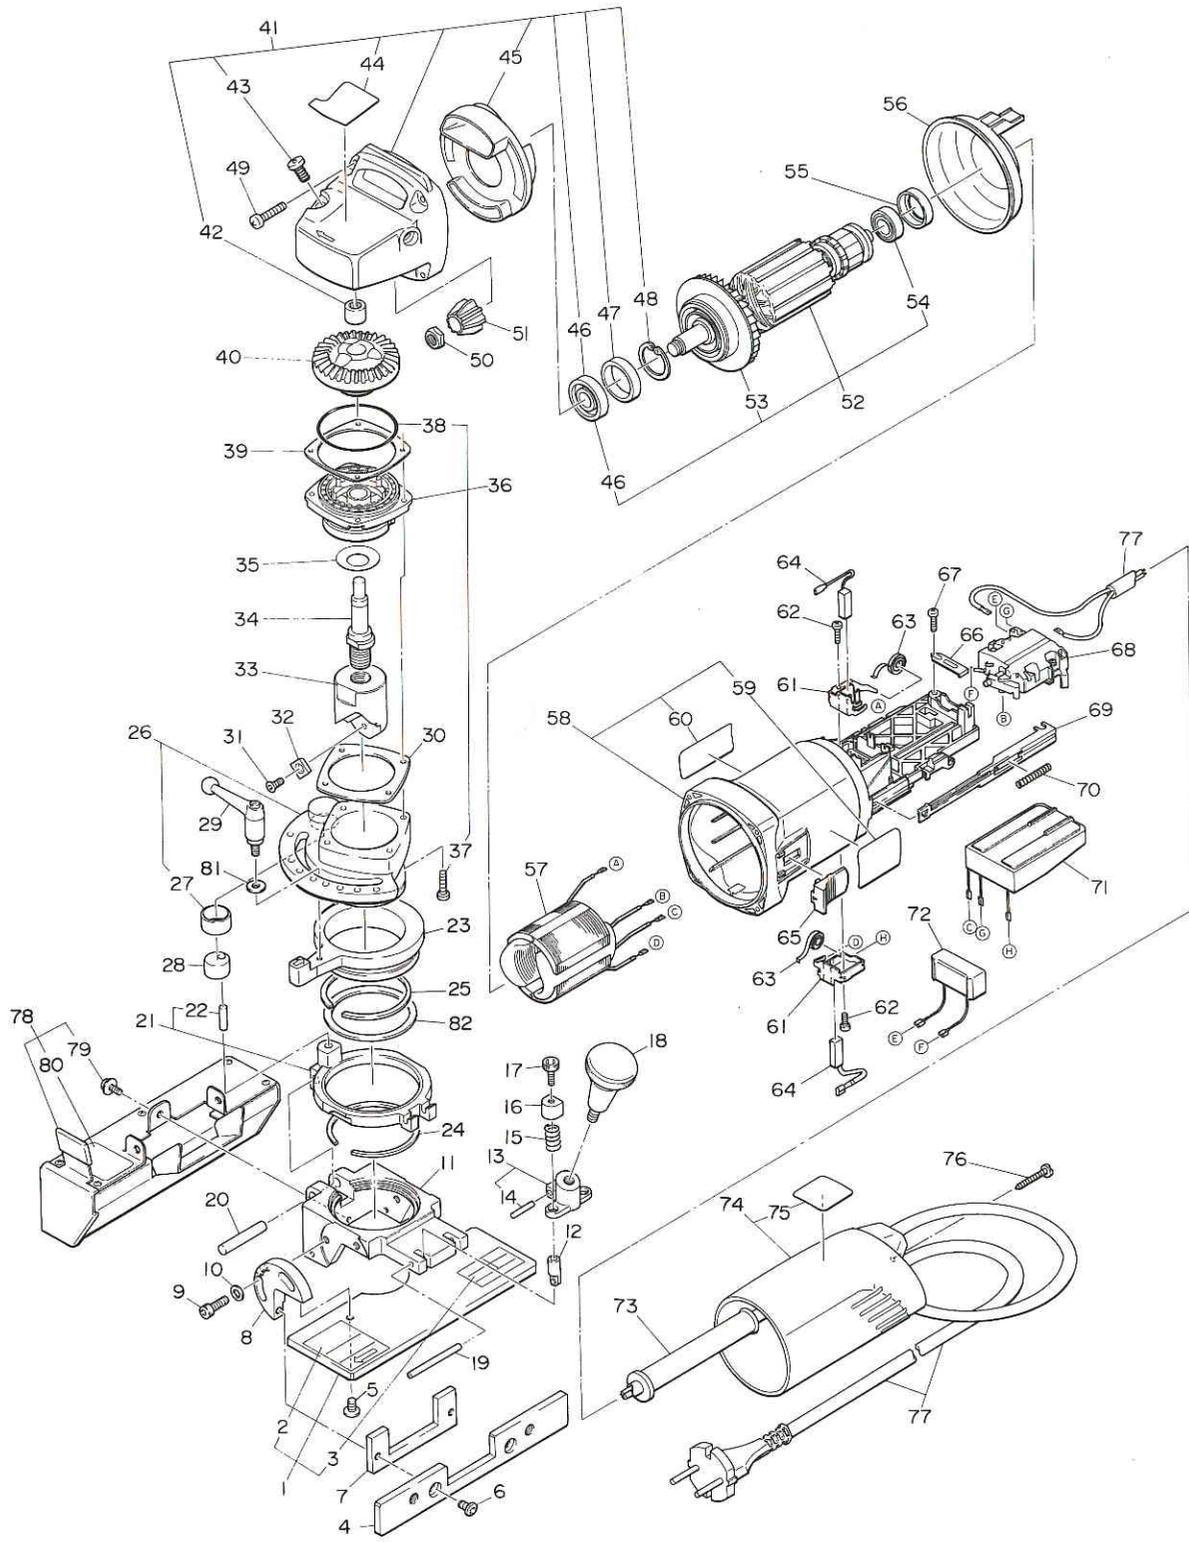

MINE BEVELER EMB-0307A PARTS LIST

The part numbers with () are included in the Ass'y parts written above them.

No.	Part No.	Part Name	Q'ty	Price
1	TB02632	Plate C Ass'y	1 set	
2	(TP16975)	Label A (Caution)	1	
3	(TQ01684)	Label B (beveling level)	1	
4	TQ03415	Plate D	1	
5	TQ00211	Hex. Socket Head Screw 5×8	2	
6	TQ00214	Hex. Socket Head Screw 5×12	2	
7	TQ04308	Plate Supporter	1	
8	TP18065	Plate Guide	2	
9	TP02862	Hex. Socket Head Cap Screw 5×15	4	
10	TP03291	Plain Washer M5	4	
11	TQ04301	Head	1	
12	TQ04305	Shaft	2	
13	TB03291	Lock Block A Ass'y	1 set	
14	(TQ04306)	Parallel Pin A4×25	1	
15	TQ04302	Spring 1.2×10.5×14	2	
16	TQ04303	Cover	2	
17	TP00021	Hex. Socket Head Cap Screw 5×10	2	
18	TA93017	Knob Ass'y	1 set	
19	TQ04307	Parallel Pin A5×50	1	
20	TQ04300	Parallel Pin A8×35	1	
21	TB03290	Lock Plate Ass'y	1 set	
22	(TQ04298)	Parallel Pin A6×20	1	
23	TQ04296	Eccentric Ring	1	
24	TQ04310	Concentric Snop Ring WR-65	1	
25	TP18056	Concentric Snop Ring WR-52	1	
26	TB03392	Adapter Ass'y	1 set	
27	(TQ04442)	Bushing LFB-1810	1	
28	TQ04297	Eccentric Top	1	
29	TQ04294	Clamp Lever KR5×15	1	
30	TQ04328	Spacer t0.05 (for adjustment)		
	TQ04329	Spacer t0.1 (for adjustment)		
	TQ04330	Spacer t0.2 (for adjustment)		
	TQ04331	Spacer t0.3 (for adjustment)		
	TQ04332	Spacer t0.5 (for adjustment)		
31	TQ01629	Indexable Insert Set Screw 4×7	1	
32	TB01159	Indexable Insert with Hole 12.7 (10 pcs./set)	1 set	
33	TQ03412	Holder	1	
34	TQ03795	Spindle	1	
35	TQ03796	Washer	1	
36	TB03407	Bearing Case Ass'y C	1 set	
37	(TP14471)	Hex. Socket Head Cap Screw 4×20	4	
38	(TQ01578)	O-ring 46×48×1	1	
39	TQ03822	Spacer For Bearing Case 0.1mm		
	TQ03823	Spacer For Bearing Case 0.15mm		
	TQ03824	Spacer For Bearing Case 0.2mm		
	TQ03825	Spacer For Bearing Case 0.3mm		
40	TQ03797	Gear	1	
41	TB03321	Gear Case Ass'y A	1 set	
42	(TP16788)	Needle Bearing HK0808	1	
43	(TB03234)	Lock Button Ass'y	1 set	
44	(TQ03840)	Label Caution	1	

No.	Part No.	Part Name	Q'ty	Price
45	(TQ04210)	Air Deflector Ring	1	
46	(TQ04203)	Ball Bearing 608LU	1	
47	(TP16785)	Gum Ring A	1	
48	(TQ04214)	Retaining Ring	1	
49	TQ04219	⊕Tapping Screw 4×25	4	
50	TP16763	Hex. Nut M7 Special	1	
51	TQ04213	Pinion	1	
52	TB03322	Armature Ass'y 230V	1 set	
46	(TQ04203)	Ball Bearing 608LU	1	
53	(TQ04200)	Fan	1	
54	(TP06386)	Ball Bearing 607ZZ	1	
55	TQ04208	Gum Ring	1	
56	TQ04209	Fan Guide	1	
57	TB03339	Stator Ass'y 230V	1 set	
58	TB03409	Motor Case Ass'y	1 set	
59	(TQ04319)	Label Model Number	1	
60	(TQ04318)	Label Warning	1	
61	TQ04204	Brush Holder	2	
62	TQ04216	⊕Tapping Screw 2.9×9.5	2	
63	TQ04205	Brush Spring	2	
64	TB03219	Carbon Brush Ass'y (2 pcs./set)	1 set	
65	TP16803	Swit5ch Button	1	
66	TP16772	Cord Clamp	1	
67	TQ04215	⊕Tapping Screw 3×9	1	
68	TP16766	Switch FV-110	1	
69	TQ04206	Slider	1	
70	TP16804	Spring 0.5×4.5×29	1	
71	TQ04383	Governor 230V	1	
72	TQ04202	Condenser	1	
73	TQ04384	Cord Armour 230V	1	
74	TB03324	Motor Cover Ass'y	1 set	
75	(TQ03819)	Label Electronic	1	
76	TQ04217	⊕Tapping Screw 4×18	1	
77	TQ04382	Cabtyre Cord	1	
78	TB03427	Dust Box Ass'y	1 set	
79	(TQ04475)	⊕Pan Head Screw 5×10	3	
80	(TQ04472)	Label Caution Dust Box	1	
81	TQ04642	Plain Washer M5 12×5.5×0.5	1	
82	TQ04775	Spacer t0.1 (for Lock Plate)	1	
	TQ04776	Spacer t0.2 (for Lock Plate)	1	
	TQ04777	Spacer t0.05 (for Lock Plate)	1	

ACCESSORIES

	TB01159	Indexable Insert with Hole 12.7 Ass'y	1 set	
	TQ01629	Indexable Insert Set Screw 4×7	1	
	TB03219	Carbon Brush Ass'y (2 pcs./set)	1 set	
	TP01939	Hex. Socket Screw Key 4	1	
	TQ01683	Spanner T-15D	1	
	TP08584	Hex. Nut M8	2	
	TP17133	Hex. Socket Set Screw 8×25 Special	2	
	TQ04445	Instruction Manual	1	