


# BELTON EB-20A ASSEMBLY AND PARTS LIST

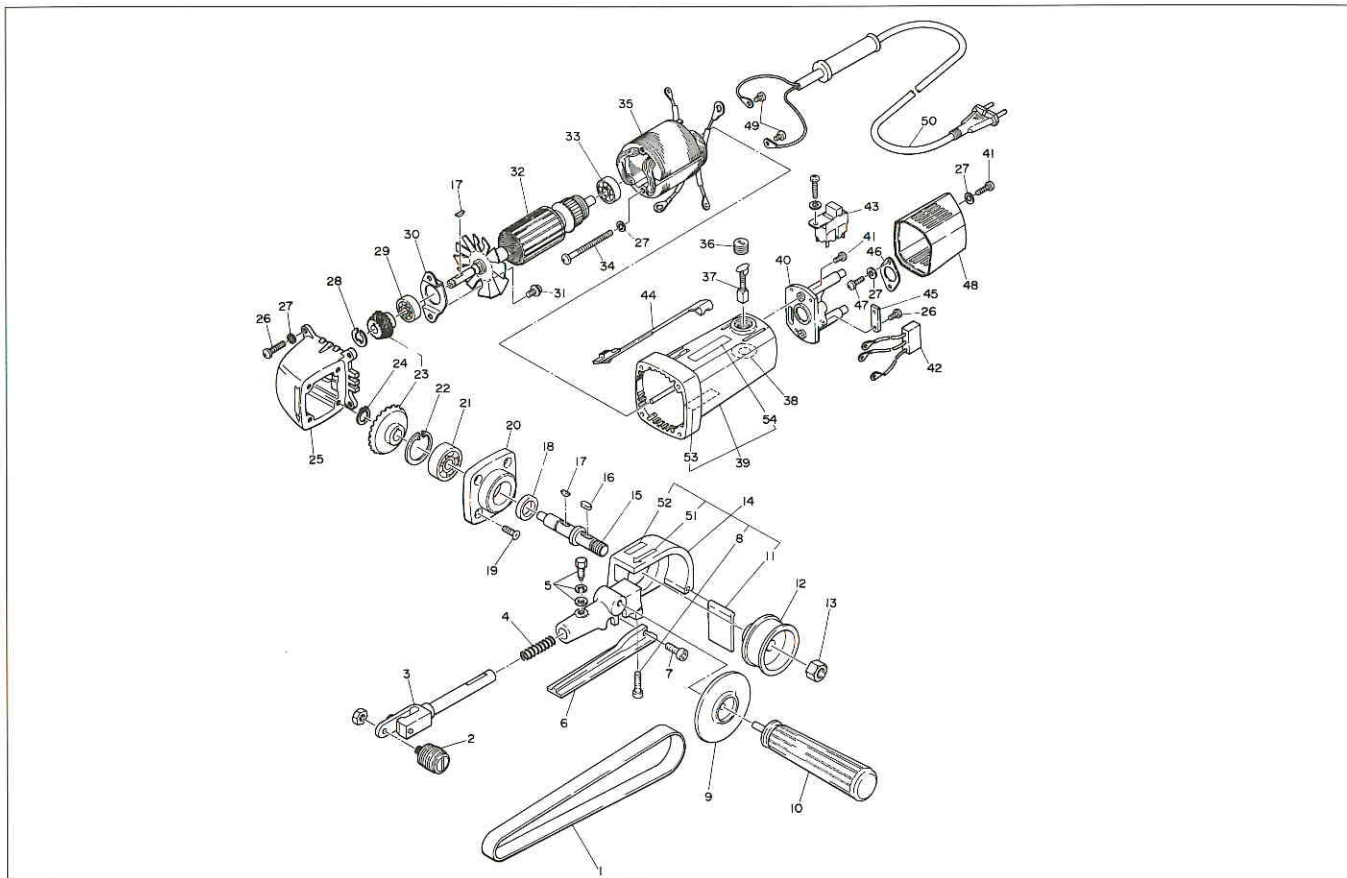

The Part Numbers with ( ) are included in the Ass'y parts written above them.

No.	Part No.	Part Name	Q'ty	Price
1	TP15867	Abrasive Belt Z76X # 60×20	1	
2	TA90514	Idle Pulley B Ass'y	1 set	
3	TA9A632	Idle Pulley Bracket B Sub Ass'y	1 set	
4	TP16535	Spring 1.2×7.8×51	1	
5	TA92254	Key Bolt Ass'y	1 set	
6	TP01935	Flat Shoe	1	
7	TP01945	Hex. Socket Head Cap Screw 5×12	1	
12	TP01917	Drive Pulley	1	
13	TP01918	Hex. Nut M10×1.25	1	
14	TB01937	Guard Body Ass'y	1 set	
8	(TP01934)	Hex. Socket Head Cap Screw 5×18	1	
11	(TP16207)	Dust Cover	1	
51	(TP16360)	Warning Label for Wheel Guard	1	
52	(TP16361)	Warning Label	1	
15	TQ00827	Spindle	1	
16	TQ01370	Parallel Key both ends round 4×4×18	1	
17	TP03755	Woodruff Key 2.5×10	2	
18	TP16195	Dust Seal	1	
19	TP02750	Countersunk Head Screw 4×12	4	
20	TP16119	Bearing Case	1	
21	TP03675	Ball Bearing 6200ZZ	1	
22	TP01173	Internal Retaining Ring C-30	1	
23	TB01097	Pinion Gear Ass'y	1 set	
24	TP04595	External Retaining Ring C-10	1	
25	TB00609	Gear Case Sub Ass'y	1 set	
26	TP16208	Pan Head Tapping Screw 4×16	6	
27	TP04234	Spring Washer M4	10	
28	TQ00422	Bowed Retaining Ring E BETW-6	1	
29	TP11779	Ball Bearing 629DD	1	
30	TP16252	Bearing Supporter	1	
31	TP11245	Pan Head Screw 4×10	2	

No.	Part No.	Part Name	Q'ty	Price
32	TA9A446	Rotor Sub Ass'y	1 set	
33	TP16251	Ball Bearing 627ZZ	1	
34	TP16254	Pan Head Screw 4×60	2	
35	TA9A444	Stator Ass'y	1 set	
36	TP16213	Brush Cap	2	
37	TA9A633	Carbon Brush Ass'y	1 set	
38	TP16266	Insulation Seat Metal	2	
39	TB03218	Motor Case Ass'y	1 set	
53	(TQ04069)	Plate Nitto	1	
54	(TP16216)	Plate Specification	1	
40	TP16256	Insulation Stand	1	
41	LP12832	Pan Head Tapping Screw 4×14	4	
42	TQ03965	Capacitor SKT	1	
43	TA99917	Switch Ass'y	1 set	
44	TA99916	Switch Lever Ass'y	1 set	
45	TP16261	Cord Clamp	1	
46	TP16262	Cord Stopper	1	
47	TP04235	Pan Head Screw 4×8	1	
48	TP16255	Motor Cover	1	
49	TP16292	Pan Head Screw 3.5×8	4	
50	TB02514	Cabtyre Cord Ass'y	1 set	

## ACCESSORIES

	TP01939	Hex. Wrench Key 4	1	
	TP01940	Convex Shoe	1	
	TP15867	Abrasive Belt Z76X # 60×20	1	
	TP15868	Abrasive Belt Z76X # 80×20	1	
	TP15869	Abrasive Belt Z76X # 100×20	1	
	TP15870	Abrasive Belt Z76X # 120×20	1	
9	TA91354	Sub Handle Ass'y	1 set	
10	TP16126	Grip Guard	1	
	TQ03903	Instruction Manual	1	